

Sound Stage

L37SPB14





Contents

Safety Warnings	3
Unpacking	5
Product Overview	6
Front View.....	6
Top View.....	6
Rear View.....	6
Remote Control	7
Remove the Plastic Strip from the Remote Control	7
Battery Replacement for the Remote Control	8
Remote Control Operation Range	9
Placing TV or Vision Device	9
Connections	10
Using the OPTICAL Connection.....	10
Using the AUX Connection.....	10
Using the MP3 LINK Connection.....	11
Connecting to the Mains Supply.....	11
General Operation	12
Selecting Modes.....	12
Adjusting the Volume.....	12
Selecting the Equaliser.....	12
Adjusting the Brightness.....	12
Bluetooth® Operation	13
Listen to Music from Bluetooth Device.....	14
AUX / MP3 LINK / OPTICAL Operation	14
Maintenance	14
Hints and Tips	14
Specifications	15

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/ electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- A minimum distance of 5cm around the unit should be maintained to allow for sufficient ventilation.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the working of the unit, and cause a distorted sound.


Batteries


- Batteries used in the unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the unit. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.
- Do not expose the battery to direct sunlight or sources of excessive heat.

Supervision

- Children should be supervised to ensure that they do not play with the unit.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit’s surface.
- Do not use liquids to clean the unit.

Thank you

for purchasing your new Logik Sound Stage. We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:



Main Unit



Remote Control



 
Mains Cable



3.5mm to RCA Stereo Audio Cable



3.5mm to 3.5mm Audio Cable




Instruction Manual



If items are missing, or damaged please contact Partmaster (UK only).
Tel: 0844 800 3456 for assistance.


Product Overview

 Front View

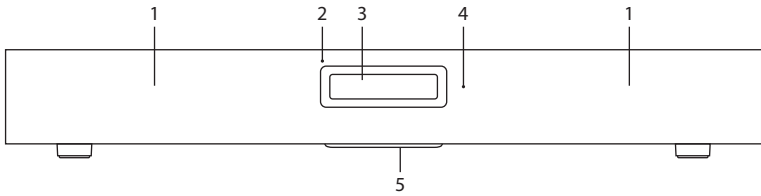


1. Speakers
2. Power Indicator
3. Display
4. Remote Control Sensor
5. Subwoofer

 Top View

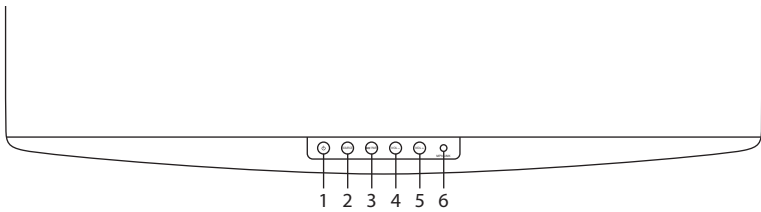


1. ⏻ Button
2. **SOURCE** Button
3. ▶II / **PAIR** Button
4. **VOL -** Button
5. **VOL +** Button
6. **MP3 LINK** Socket

 Rear View

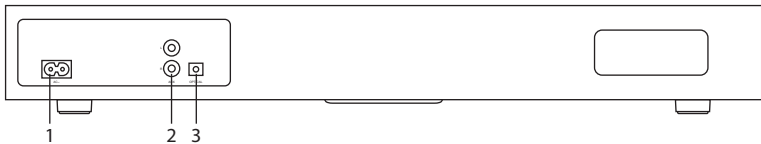

1. **AC~** Socket
2. **AUX (L/R)** Sockets
3. **OPTICAL** Socket

 
Remote Control

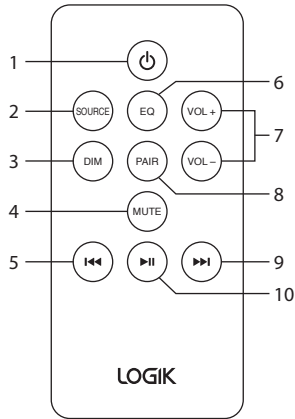

1. **⏻ Button**
Switch the unit between On and Standby mode.
2. **SOURCE Button**
Select the input source.
3. **DIM Button**
Adjust the display brightness level.
4. **MUTE Button**
Silence the unit or restore the sound.
5. **⏮ Button**
Skip backwards to the beginning of the track or to the previous track in Bluetooth mode.
6. **EQ Button**
Select the preset equaliser.
7. **VOL +/- Buttons**
Adjust the volume.
8. **PAIR Button**
Activate the pairing function in Bluetooth mode and disconnect the existing paired Bluetooth device.
9. **⏭ Button**
Skip forwards to the next track in Bluetooth mode.
10. **⏸ Button**
Play/pause/resume playback in Bluetooth mode.

Remove the Plastic Strip from the Remote Control

 
Remove the plastic strip from the battery if the battery is being used for the first time. It is located at the bottom rear of the remote control.

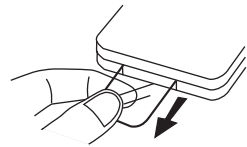

Battery Replacement for the Remote Control

The remote control requires a CR2025, 3V Lithium battery.

 1. Slide and hold the battery release tab in the direction of the arrow.
2. Pull out the battery holder and remove the old battery.
3. Replace with a new battery.
4. Insert the battery holder back into the remote control.

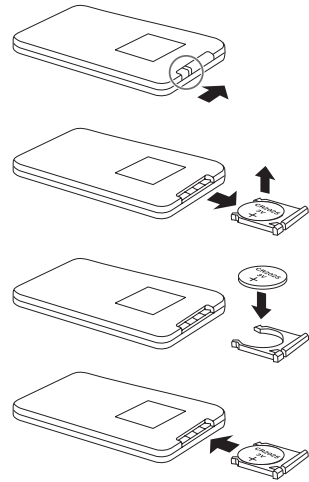

Handling the Battery

 
- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Install the battery correctly in the battery compartment.
- When the battery is exhausted, the remote control will not function.
- Only use the battery type indicated in this manual.
- Do not dispose of the used battery as domestic waste. Dispose of it in accordance with local regulations.
- Small button cell batteries such as the one used in the remote control are easily swallowed by young children and this is dangerous. Keep loose button cells away from young children and make sure that the battery is secure in the remote control. Seek medical advice if you believe a battery cell has been swallowed.

Handling the Remote Control

- Take care of your fingernails when you slide and pull the battery release tab.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or liquid on the remote control.
- Do not place the remote control on a wet object.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.


Remote Control Operation Range

- The remote control sensor at the front unit is sensitive to the remote control's commands up to a maximum of 6 metres away and within a maximum of a 40° arc.
- Please note that the operating distance may vary depending on the brightness of the room.

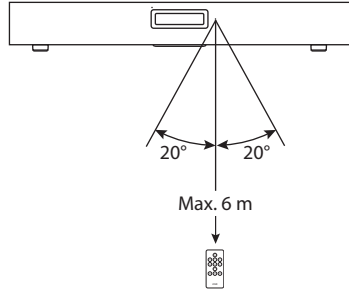

Placing TV or Vision Device

 The unit supports a TV up to a maximum dimension of 48 cm (W) x 22 cm (D) for its base and within a maximum load of 30 kg.

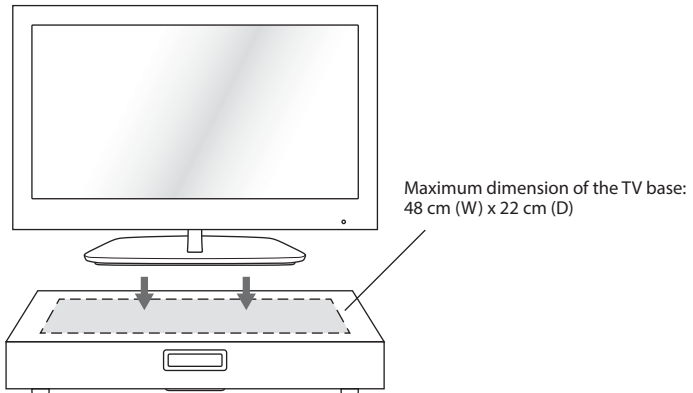


Ensure the TV or Vision Device is placed properly. Turning the volume loud may cause the device to fall down.

Connections

Using the OPTICAL Connection

 
Use an optical cable (not included) to connect the TV's optical output socket to the unit's **OPTICAL** socket. Before inserting the optical cable, remove the **OPTICAL** socket cover.

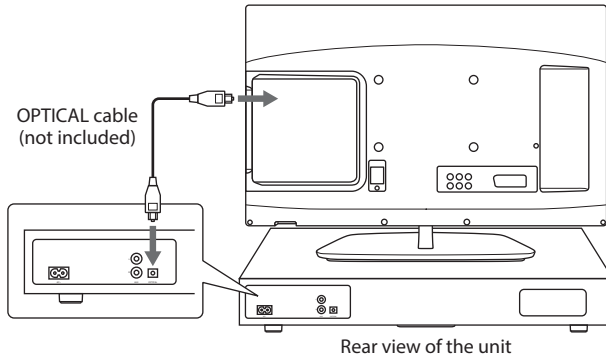

If there is no sound output and the display shows **PLEASE CHANGE YOUR SOURCE DEVICE TO PCM MODE UNDER AUDIO OUTPUT SETTING**, ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM mode.

Using the AUX Connection

 
Use the 3.5mm to RCA Stereo Audio Cable to connect the TV's headphone socket to the **AUX (L/R)** Sockets of the unit.

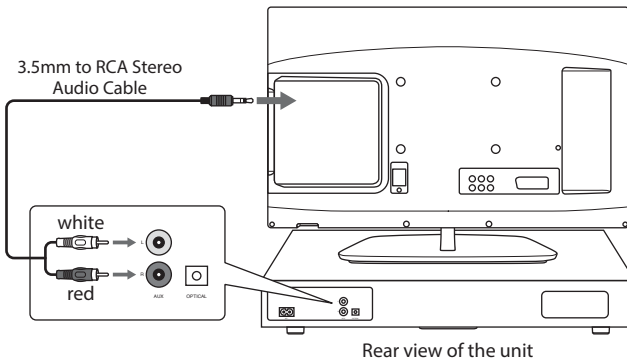

Alternatively, you can also use an RCA Stereo Audio Cable (not included) to connect the TV's audio output sockets to the unit's **AUX (L/R)** sockets.


Using the MP3 LINK Connection

 Use the 3.5mm to 3.5mm audio cable to connect the audio device's headphone socket to the unit's **MP3 LINK** socket.

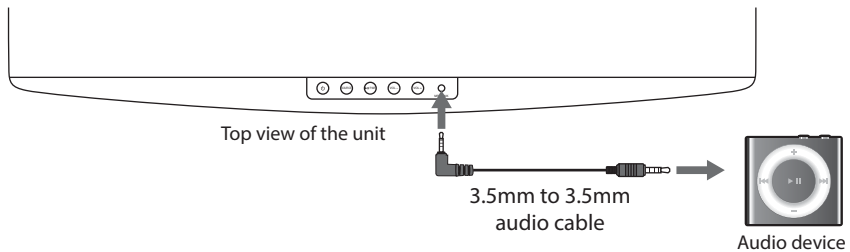

Connecting to the Mains Supply

 - Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- This unit is designed to operate with the provided mains cable.
- Connecting the unit to any other power source may damage the unit. Unwind the mains cable to its full length.
- Connect the end of the mains cable to the **AC~** Socket at the rear of the unit.
- Connect the mains plug to a mains socket. Make sure the mains plug is fully inserted into the mains socket.

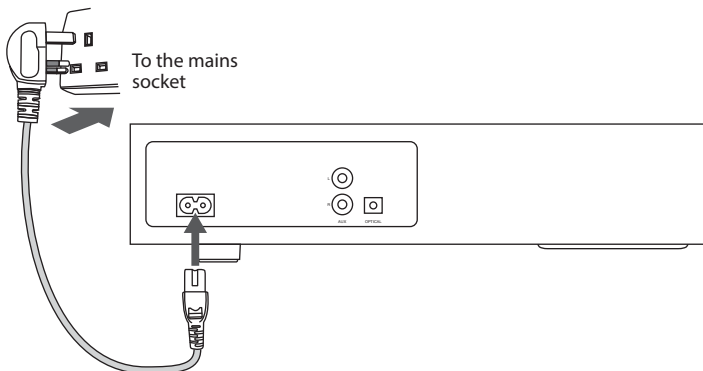

- Ensure all audio connections of the unit are connected before connecting to the mains power socket.
- Unplug the power cord from the outlet when the unit is not in use for an extended period of time.

General Operation

When you first connect the unit to the mains socket, the unit will be in Standby mode. The **POWER** Indicator will light up red.

- Press the **⏻** Button to switch the unit on. The display will show a greeting message **HELLO** and then the last used mode.
- Press the **⏻** Button to switch the unit back to Standby. The display will show **STANDBY** and then the unit will turn off. The **POWER** Indicator will light up red.
- Disconnect the mains plug from the mains socket if you want to switch the unit off completely.



When the unit volume is close to mute or is idle for approximately 15 minutes, it will automatically switch to Standby.

Selecting Modes

Press the **SOURCE** Button repeatedly to switch between **AUX**, **BT**, **MP3 LINK** and **OPTICAL** mode.

Adjusting the Volume

- Press the **VOL +/-** Button to adjust the volume.
- If you wish to turn the sound off, press the **MUTE** Button on the remote control. Press the **MUTE** Button again or press the **VOL +/-** Button to resume normal listening.

Selecting the Equaliser

Press the **EQ** Button on the remote control repeatedly to select a desired music mode. (**DEFAULT**, **MOVIE**, **MUSIC**, **TV**).

- When **AUX** or **OPTICAL** mode is selected, the equaliser will be set to **MOVIE**.
- When **BT** or **MP3 LINK** mode is selected, the equaliser will be set to **MUSIC**.

Adjusting the Brightness

Press the **DIM** Button on the remote control repeatedly to select brightness level.

Bluetooth® Operation

You can listen to tracks from a media device if it is connected to the unit via Bluetooth.



- The operational range between the main unit and a Bluetooth device is approximately 8 meters.
- Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of the device.
- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- Keep this unit away from other electronic devices that may cause interference.

To connect your device to the unit via Bluetooth, follow the steps below:

1. Switch the unit on. Press the **SOURCE** Button on the remote control repeatedly to select **BT** mode. The display will show **BT** and then **BT READY**.
2. Press and hold the **▶/PAIR** Button on the unit or the **PAIR** Button on the remote control to activate Bluetooth pairing.
3. The display will show "**DISCONNECT**" twice and then "**BT READY**" when searching for Bluetooth devices.
4. Activate your Bluetooth device and select the search mode.
5. "**L37SPB14**" will appear on your Bluetooth device list.
6. Select "**L37SPB14**" and enter "**0000**" for the password if necessary.
7. The display will show "**PAIRED**" when connection is successful.
8. To disconnect the Bluetooth function, switch to another function on the unit or disable the function from your Bluetooth device.



- If there is an existing connection, press the **▶/PAIR** Button on the unit or the **PAIR** Button on the remote control to re-activate the pairing mode, the existing connection will be interrupted.
- If no other Bluetooth device pairs with this player within two minutes, the player will recover its previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
 - If the connection is lost, follow the instructions above to pair your device to the player again.

Listen to Music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
 - If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.
1. Pair your device with the player.
 2. Play music via your device (if it supports A2DP)
 3. Use supplied remote control to control play (if it supports AVRCP)
 - To pause/resume play, press the ►|| Button.
 - To skip to a track, press the ◀◀▶▶ Button.

AUX / MP3 LINK / OPTICAL Operation

1. Ensure that the unit is connected to the TV or audio device.
2. Press the **SOURCE** Button repeatedly to select the desired mode.
3. Press the **VOL+/-** Button to adjust the volume.
4. Press the **EQ** Button on the remote control to select the desired equaliser.



- When connecting the external device, refer to the owner's manual of the external device, as well as the manual.
- Examples of External Audio Device that can be connected to the unit are: Portable MP3 Players, Cassette Players, Mini Disc Players, DVD Players, etc.

Maintenance



Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.

Hints and Tips

If a problem occurs, it may often be due to something very minor. The following table contains various tips.

Problem	Solution
No power.	<ul style="list-style-type: none">• Ensure the mains cable is connected securely.• Make sure that the unit is switched on.

Problem	Solution
Loud hum or noise is heard.	The plugs and sockets are dirty. Wipe them with a cloth slightly moistened with an appropriate non-abrasive cleaning solution.
The remote control does not function.	<ul style="list-style-type: none"> • Use the remote control near the unit. • Point the remote control at the remote control sensor on the unit. • Replace the battery in the remote control with a new one. • Remove any obstacles between the remote control and the unit.
The unit does not respond when pressing any buttons.	The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.
No sound output.	<ul style="list-style-type: none"> • Make sure that the unit is not muted. Press the MUTE or VOL +/- Button to resume normal listening. • Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM mode while using optical connection.
I cannot find "L37SPB14" on my Bluetooth device.	Ensure the Bluetooth function is activated on your Bluetooth device.



If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

Specifications

Model	L37SPB14
Power	
Power Supply	220-240V~ 50/60Hz
Power Consumption	18W
Speaker Output Power	15Wrms x 2 + 30Wrms (Subwoofer)
Feature	
Connectivity	AUX IN (L/R) Sockets, MP3 LINK Socket, OPTICAL Socket, Bluetooth 3.0
Dimension (W) x (D) x (H)	525 x 305 x 75 mm
Net Weight	4.4kg

Features and specifications are subject to change without prior notice.



For general information about this appliance
and handy hints and tips, please visit
www.knowhow.com/knowledgebank or call 0844 5611234.



Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0844 800 3456 (UK customers only) Calls charged at National Rate.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by DSG Retail Limited is as an Affiliate under the License held by DSG International Sourcing Ltd. Other trademarks and trade names are those of their respective owners and all rights are acknowledged.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment.

We continually strive to improve our products; specifications may change without prior notice. For advice on where to purchase accessories, please contact the store where you purchased your equipment.

All trademarks are the property of their respective owners and all rights are acknowledged.

DSG Retail Ltd. (co. no. 504877)
Maylands Avenue, Hemel Hempstead, Herts., HP2 7TG, UK

IB-L37SPB14-140205V2