

Pandora Box Arcade Machine Operating Instructions and service manual

Start up

These machines are extremely simple to operate and only need to be plugged in and switched on at the mains plug.

Game selection and play

Once the machine starts up you will be presented with a screen showing a list of games with a corresponding picture of the currently selected game.

Move the Joystick up and down to move through the games one at a time.

Move the joystick left and right to move a page at a time.

To load the selected game press the 1 player 'A' button (button nearest to the joystick).

Once the game has loaded, you must 'enter credits', press the one or two player start buttons to enter credits.

Once credits are entered press either the player one start button to start a one player game or press the player two start button for a two player game, these are the white buttons on either end of the machine with one or two little black men on them respectively. Note that some games may only have a single player mode.

To exit the game at any time and return to the main menu, press and hold player 1 start button, a menu will appear on the screen, select exit and you will be returned to the game select menu.

Game search and favourites

To search for a game on this board you can press player 1 start button. This allows you to find your favourite game and also see the most recent games that you have played.

You may like to set a favourite list of games on the machine. To do this press the black menu button to enter the board setup. Go to game setting, press button C. You can then favourite or unfavourite any games that you like. Once finished press player 1 start twice and select save setting. This will reboot the machine and you will see your favourite games at the top of the game list each time you use the machine.

Setup and configuration

All of the Pandora Box series machines have a configuration mode, which should not be needed in most cases in addition to setting your favourite games list.

To Enter setup mode the black menu button can be pressed at any time.

If you need to amend these settings or your machine is behaving in an unusual way then please contact us before attempting to amend these settings.

Maintenance and care

The machines should be cleaned using a mild detergent only.

The following usage guidelines must be adhered to:

Do not operate in extreme heat conditions over 40 degrees Celsius

Do not operate in extreme humidity

Do not operate during thunderstorms

Keep upright at all times

Stay connected

Once you've got yourself set up with your new machine why not pop over to our Facebook page (facebook.com/arcadedepot) and like our page to keep up to date with us.

We'd also love a review of the machine wherever you purchased your machine, or on our Facebook page. As a small business, reviews help massively to show that we create a product that we're proud of and that you're enjoying using.



**ARCADE
DEPOT**
arcadedepot.co.uk